







RSV 100 with  
HYPERCONE™ AIR FLOW SYSTEM

SPARE PARTS

ITEM #	PART #	DESCRIPTION
1	FP-16251	TOP DOME LID
2	FP-16274	DUST BAG
3	FP-16522	CANNISTER FILTER
4	FP-16270	HYPERCONE
5	FP-16269	CONE FILTER
6	FP-16252	MAIN VACUUM CANNISTER
7	FP-21131	TOGGLE LATCH
8	FP-16253	MOTOR GASKET
9	P-205070	1100W MOTOR FLOW THRU, 230V
	P-205075	1100W MOTOR FLOW THRU, 120V
9A	FP-16276	UDS MOTOR SPACER
9B	FP-16277	UDS SPACER MOUNT
10	FP-16254	INTERMEDIATE NOISE INSULATION
11	FP-16256	INTERMEDIATE HOUSING
12	FP-16257	POWER OUTLET
13	P-220552	SWITCH
14	FP-08521	SCREW 5x20 (PLASTITE) WASHER 3/16 x 1/2
15	FP-16255	NOISE INSULATION (MOTOR)
16	FP-16260	CONNECTION BOX
17	FP-16264	MOTOR FILTER CAGE
18	FP-16259	EXTERNAL MOTOR FILTER
19	FP-08312	SCREW 3 x 12
20	FP-16262	CABLE CLAMP
21	FP-06406	CABLE GROMMET
22	FP-08625	SCREW 6 x 25
23	FP-16258	BOTTOM CAP
24	FP-21108	CABLE, 120V USA PLUG
	FP-21109	CABLE, 230V EURO PLUG



RSV 100 with  
HYPERCONE™ AIR FLOW SYSTEM

SPARE PARTS		
ITEM #	PART #	DESCRIPTION

25	FP-08520	NUT 5mm NYLOC WASHERS 3/16 x 3/4 & 3/16 x 7/16
26	FP-16120	FRAME
27	FP-16121	SHOULDER STRAP
28	FP-16263	BACK SUPPORT PADDING AND WAIST STRAPS
29	FP-16265	BOTTOM STRAP
30	FP-16268	CORD RESTRAINT
31	FP-21959	MACHINE END
32	FP-21914	HOSE CUFF HULE
33	FP-21915	HOSE CLIP RING
34	FP-21905	VACUUM HOSE
35	P-216089	HOSE CUFF ASSEMBLY

SPARE PARTS NOT SHOWN ON DIAGRAMS		
ITEM #	PART #	DESCRIPTION

	FP-21905C A-NVA 15H A-NVA 14H A-NVA 30A	HOSE COMPLETE STRAIGHT WAND SECTION CURVED WAND SECTION FLOOR TOOL (LOW PROFILE)
--	--	---